



Head Office

PMA/TOOLS AG

Siemensring 42
47877 Willich/Germany
Tel.: +49 2154 922230
Fax: +49 2154 922255
E-Mail: info@pma-tools.de
www.pma-tools.de

Subsidiaries

PMA/TOOLS FRANCE

Z.A.-214, rue de la Warnave
59850 Nieppe
Tel.: +33 320 970249
Fax: +33 320 326140
E-Mail: info@pma-tools.fr
www.pma-tools.fr

PMA/TOOLS ESPAÑA

Sta. Margarida de Boada Vell 7-9
P.I. Riera de Caldes, Nave 12
08184 Palau-solità i
Plegamans (BCN)
Tel.: +34 93 8648517
Fax: +34 93 8640020
E-Mail: info@pma-tools.es
www.pma-tools.es

PMA/TOOLS USA

201 Mills St.
East Flat Rock
NC 28726
Tel.: +1 828 2334060
Fax: +1 828 2334070
E-Mail: info@pmatools.com
www.pmatools.com




Profile Guard

Minimum. **Input** for maximum output.



One click. **Protects the profile.**

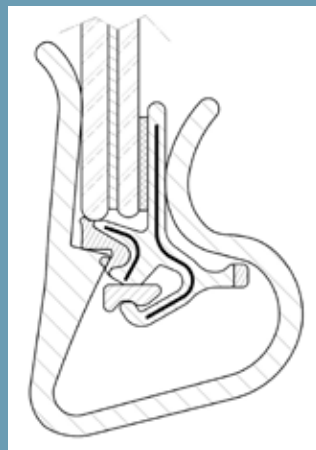

Art. No.: 99999-500

Profile Guard for self-adhesive bottom mouldings

Self-adhesive bottom mouldings are attached on all current windcreens of those models listed below and could be at risk of deformation and/or damage when transported or stored, due to the weight of the screen.

It is generally not possible to replace deformed or damaged profiles back onto the glass. In these cases a new self-adhesive profile will need to be re-attached.

The PMA/TOOLS Profile Guard eliminates this risk and avoids all bottom profile claims. Profile guard is easy to apply - just slide the guard over the bottom profile and position to suit.

Advantages:

- >> Avoids detachment/deformation of bottom mouldings during storage and transport
- >> Eliminates production re-work
- >> Eliminates customer claims
- >> Does not reduce standard crate capacity
- >> Less expensive than using blue foam and shrink wrap
- >> Easy to apply
- >> Flexible positioning
- >> Re-useable
- >> Environmental friendly product (recyclable)

Profile Guard vehicle listing:

- Audi A1 (10-) (8604)
- Audi A2 (00-05) (8562)
- Audi A3 (03-12) (8580)
- Audi A3 Convertible (08-13) (8599)
- Audi A4 (01-07) (8572)
- Audi A4 (07-) (8589)
- Audi A4 Convertible (02-09) (8574)
- Audi A5 (07-) (8592)
- Audi A5 Convertible (09-) (8602)
- Audi A6 (04-10) (8582)
- Audi A6 (10-) (8611)
- Audi A6 V8 Estate (98-05) (8567)
- Audi A6 V8 Sedan (98-05) (8566)
- Audi A7 (10-) (8608)
- Audi A8 (02-10) (8578)
- Audi A8 (10-) (8607)
- Audi Q3 (11-) (8614)
- Audi Q5 (08-) (8596)
- Audi R8 (07-) (8593)
- Audi R8 Spyder (10-) (8610)
- Audi TT (06-) (8591)
- Audi TT Convertible (07-) (8594)
- Citroen DS5 (2749)
- Ford Galaxy II (06-) (3567)
- Ford S-Max (06-) (3568)